


Pen-Drive V3.1 update



February 2020

Pen-Drive V3.1 update

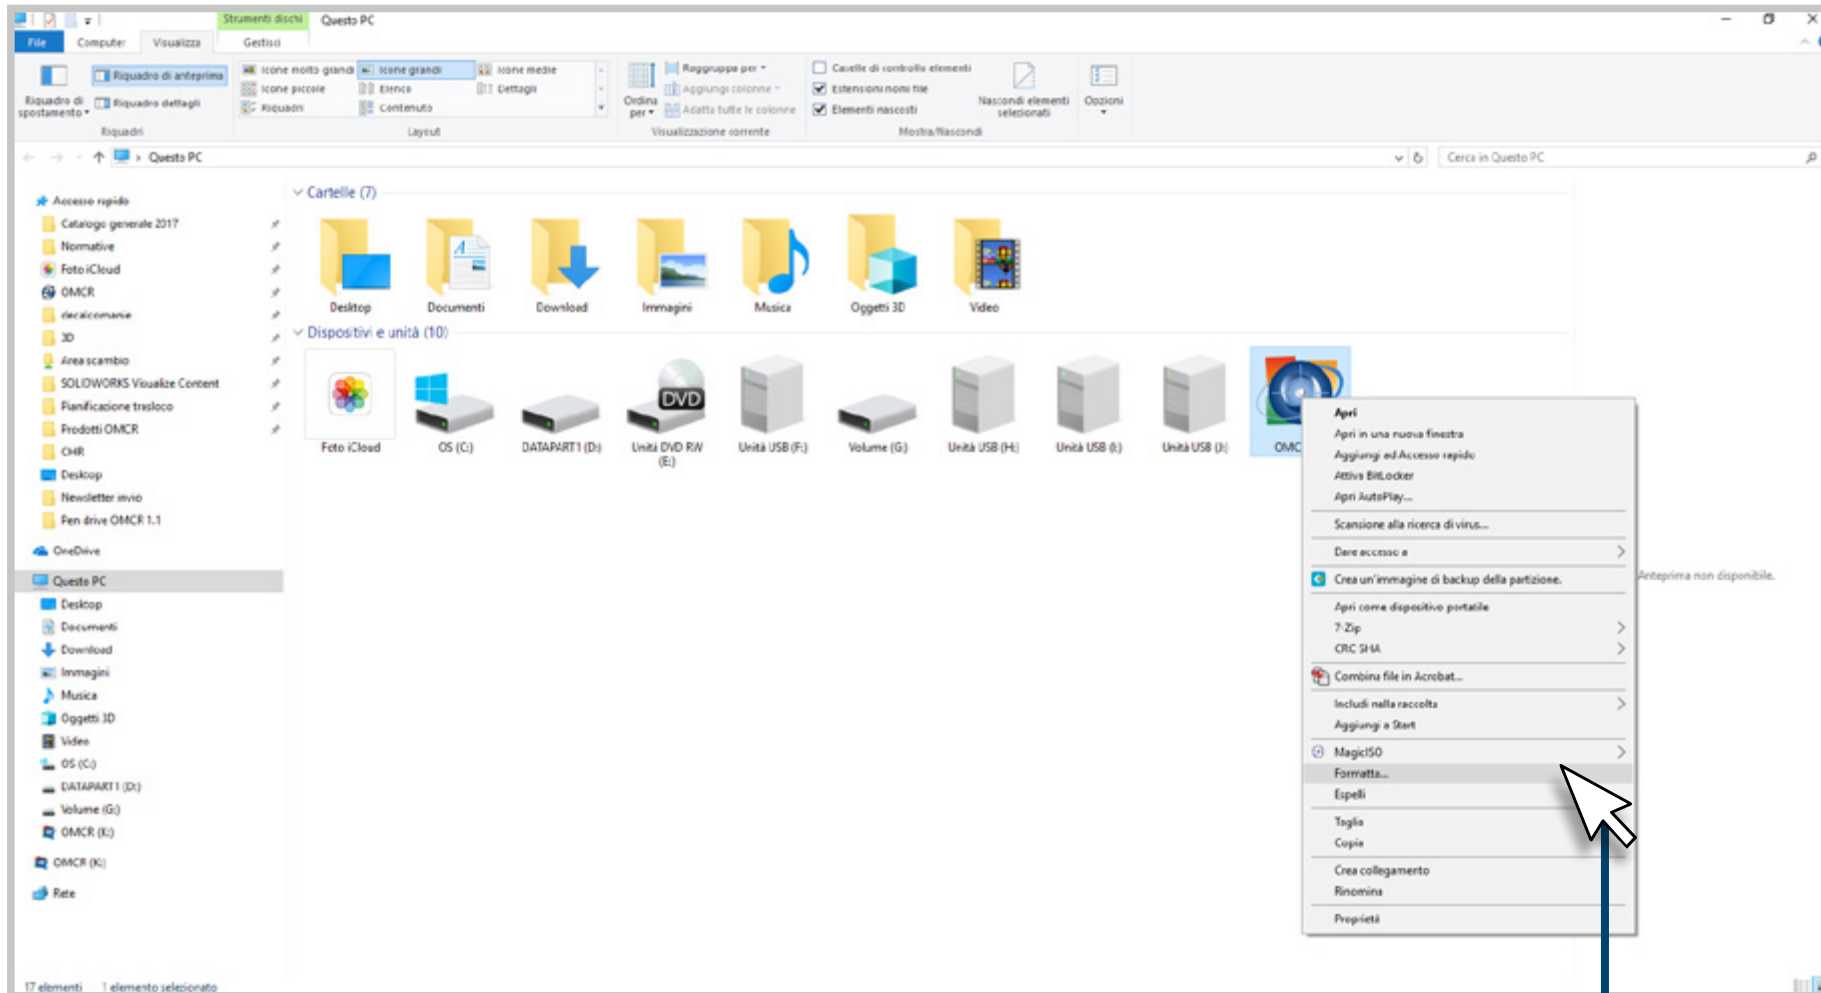

Insert the pen drive, click with the right mouse button on OMCR icon and select “**Format**” from the menu.

Pen-Drive V3.1 update



Open www.omcr.it and click on “**DOWNLOAD**” icon on the home page.

Pen-Drive V3.1 update

Download | OMCR

https://omcr.it/download.php

Products News Download Company Contacts EN

HOME > DOWNLOAD

DOWNLOAD

search...

Browse the download section and you will **find all you need to make your work easier**: CAD models, technical info, catalogs... We provide you 3D models of all our product range, the last release of all catalogs, documents full of info and appealing multimedia galleries of technical support, just a click away!

DOWNLOAD

Name	Type	Last updated
Cad 3d	folder	05/12/2016
Catalogues	folder	18/01/2019
Communication materials	folder	05/12/2016
Pen-Drive	folder	19/03/2018
Technical information	folder	05/12/2016
User manual and EC maintenance	folder	10/07/2018




© 2019 OMCR Srl - Italy - P.IVA.07.77130010 | Privacy | Cookie Policy

Back to top

On the download page click on “Pen-Drive” folder.

Pen-Drive V3.1 update


The screenshot shows a web browser window with the URL <https://omcr.it/download.php?p=download%2FPen-Drive>. The page features the OMCR logo and navigation menu (Products, News, Download, Company, Contacts, EN). The main content area is titled "DOWNLOAD" and includes a search bar. Below the search bar, there is a paragraph of text: "Browse the download section and you will find all you need to make your work easier: CAD models, technical info, catalogs... We provide you 3D models of all our product range, the last release of all catalogs, documents full of info and appealing multimedia galleries of technical support, just a click away!". A breadcrumb trail reads "DOWNLOAD > PEN-DRIVE". A table lists three files:

Name	Type	Last updated
 istruzioni-aggiornamento.pdf	pdf	19/01/2018
 pen-drive-omcr.zip	zip	19/03/2018
 Update-instruction.pdf	pdf	19/01/2018

A mouse cursor points to the "pen-drive-omcr.zip" file. A blue arrow originates from the cursor and points to a text box at the bottom of the slide.

Click on **pen-drive-omcr.zip** file to download it.

Pen-Drive V3.1 update

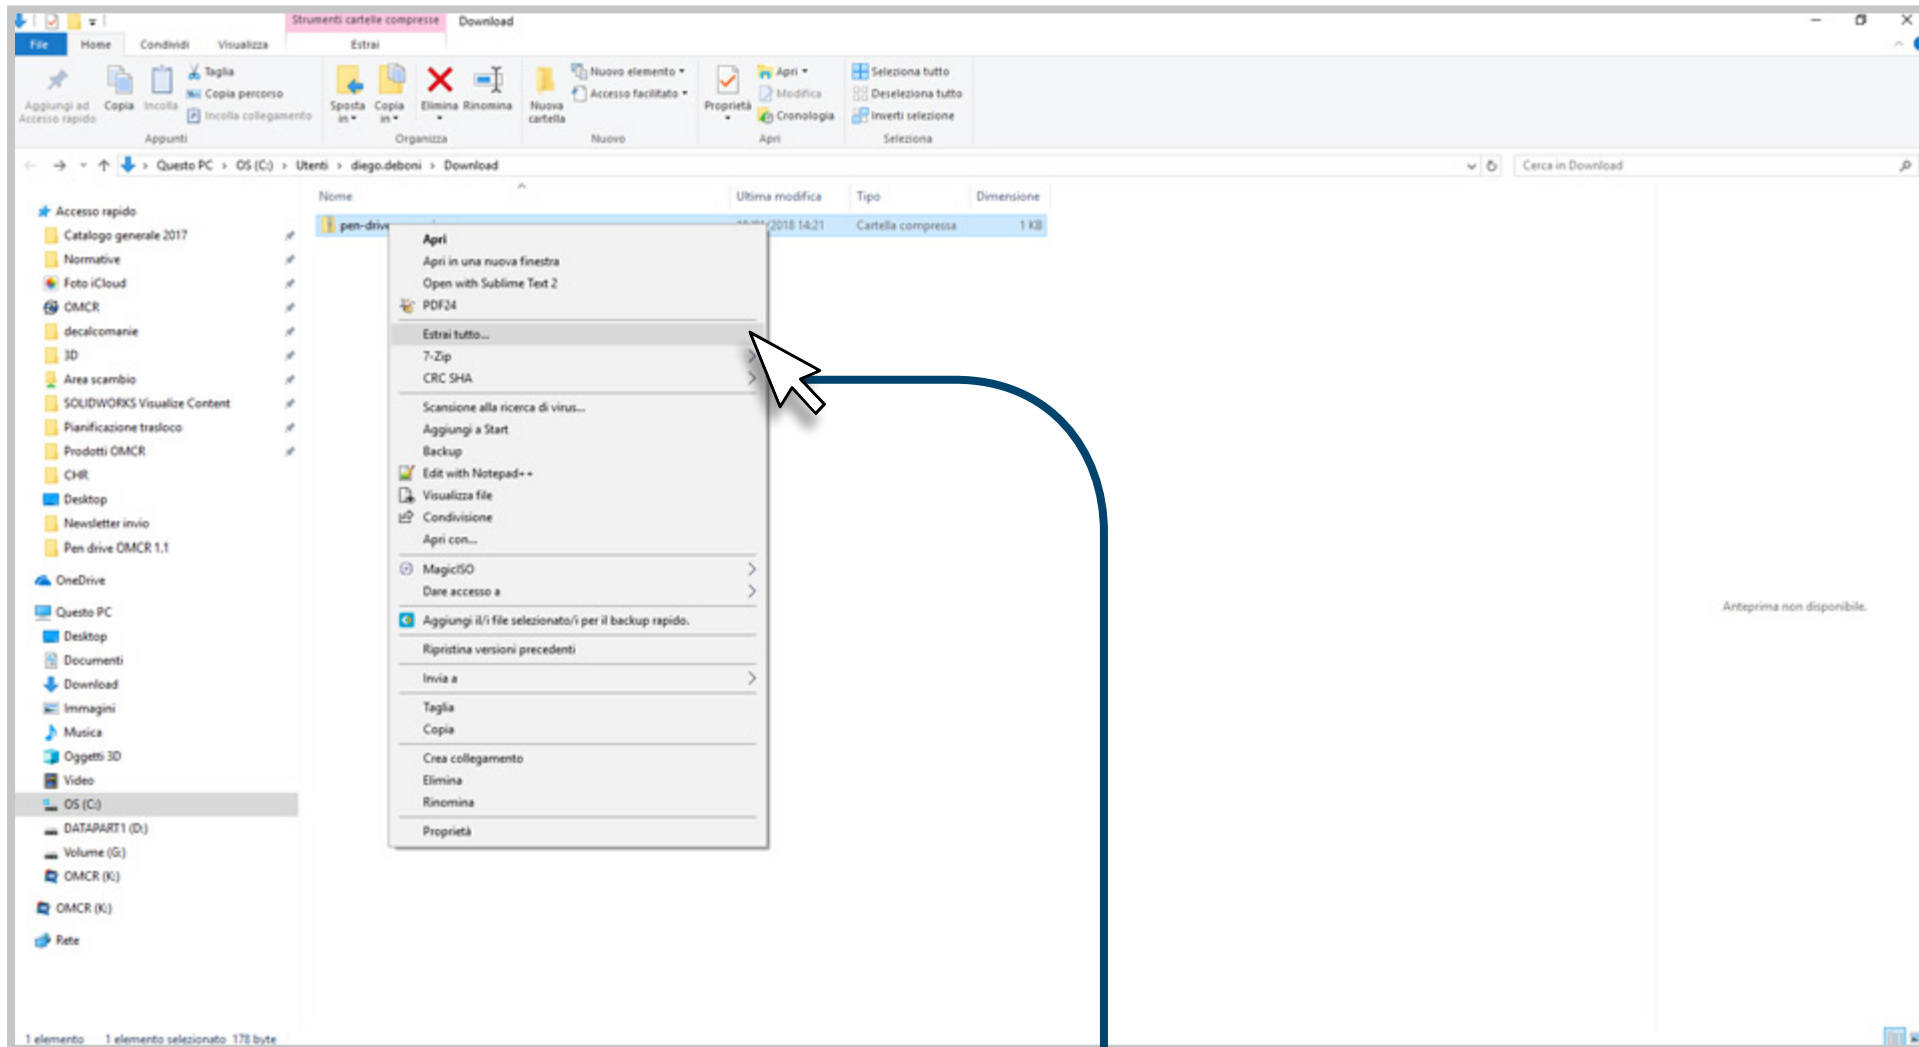

At the end of the download, with the right mouse button select “**Extract all ...**” from the menu. Now copy all extracted files into the pen drive.